



## PLENAFORM Installation Guidelines:

**A.** Measure the height of your plenum space from the sub-floor to the bottom of the stringer.

Note: Horizontal scores are spaced 1" apart.

Example: If raised floor height measures 10-1/2" high, separate PLENAFORM at 11" and flex material for a snug fit.


**B.** Separate PLENAFORM baffles at desired height.  
Tip: Folding first at desired height facilitates separation.

**C.** To attach horizontal PLENAFORM baffles together, pop out corresponding holes every 6" on adjacent baffles as shown.

**D.** Join PLENAFORM baffles together with quick-snap nylon screw rivets.

Firmly depress screw head till it is flush with washer head for a tight system assembly. Screws rivets may be easily removed with a 1/8" flat head screwdriver.

**E.** Attach PLENAFORM to pedestals with cable ties by popping out corresponding holes every 6" on adjacent baffles as shown. Trim off excess cable ties. Installation complete. **It's a snap to install!**

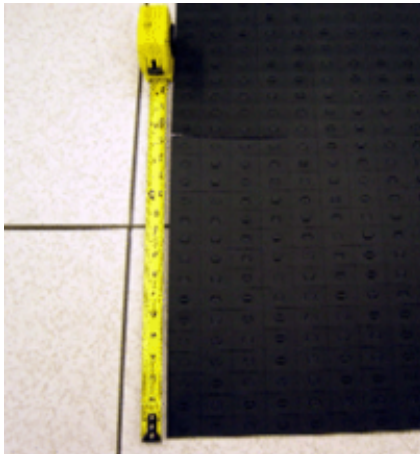

# Data Clean<sup>®</sup>

